


# Datasheet

## LNF-LNC19\_34WA

19-34 GHz Cryogenic Low Noise Amplifier

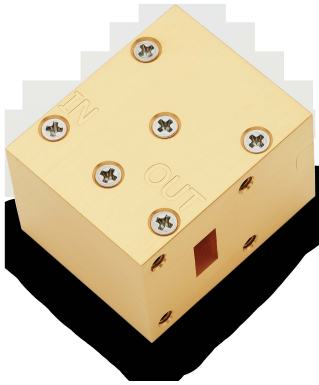

### Product Features



RF Bandwidth	19-34 GHz
Noise Temperature	10.5 K
Noise Figure	0.15 dB
Gain	28 dB
DC power (typical)	$V_{ds} = 1.0 \text{ V}$ , $I_{ds} = 14 \text{ mA}^*$
RF Connectors	WR34, UG1530/U
DC Connectors	9-pin Female Nano-D
One gate and one drain supply only	

\* See test report for actual optimum bias for your unit


Absolute maximum ratings			Typical Characteristics		
Parameter	Min	Max	Parameter	Value	Unit
$V_{ds}$	-0.5 V	2.7 V	$V_{gs}$	-0.33	V
$I_{ds}$		100 mA	IRL	15	dB
$V_{gs}$	-20 V	20 V	ORL	20	dB
DC Voltage on Input and Output	-30 V	30 V	Output P1dB	TBD	dBm
RF Input Power		0 dBm	OIP3	TBD	dBm
Operating Temperature	< 3 K	40 °C	Weight	56	grams

LNF-LNC19\_34WA is an ultra-low noise cryogenic amplifier using LNF's proprietary InP HEMT technology. MMIC technology ensures excellent unit-to-unit variation. The LNA is packaged in a waveguide module using industry standard WR34 connectors for the RF ports and Nano-D connectors to provide the DC. The lightweight gold plated aluminum body measures 27.39x33.56x22.50 mm excluding the connectors. The LNA is not hermetic and must be operated in a vacuum environment when below the dewpoint. All amplifiers are tested at 296 and 5 K and delivered with a test report.

Measured data,  $T_{amb} = 296\text{ K}$

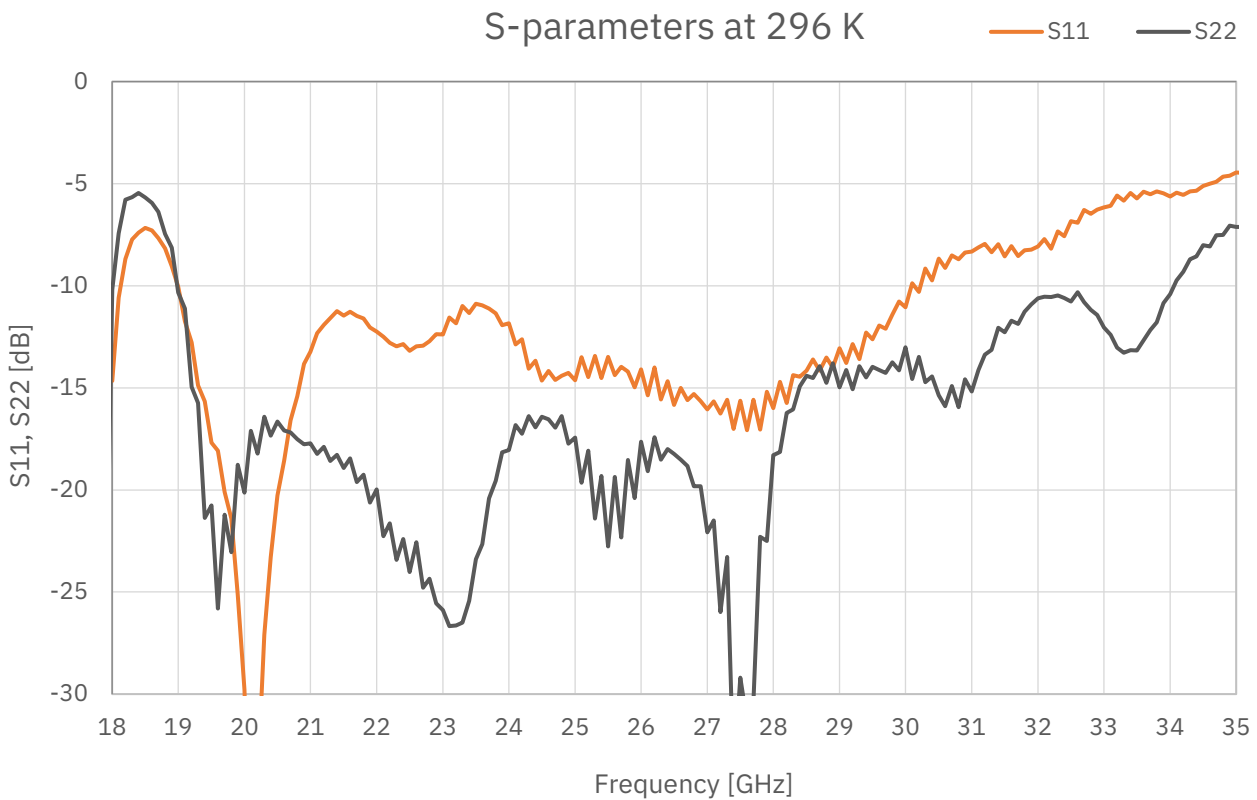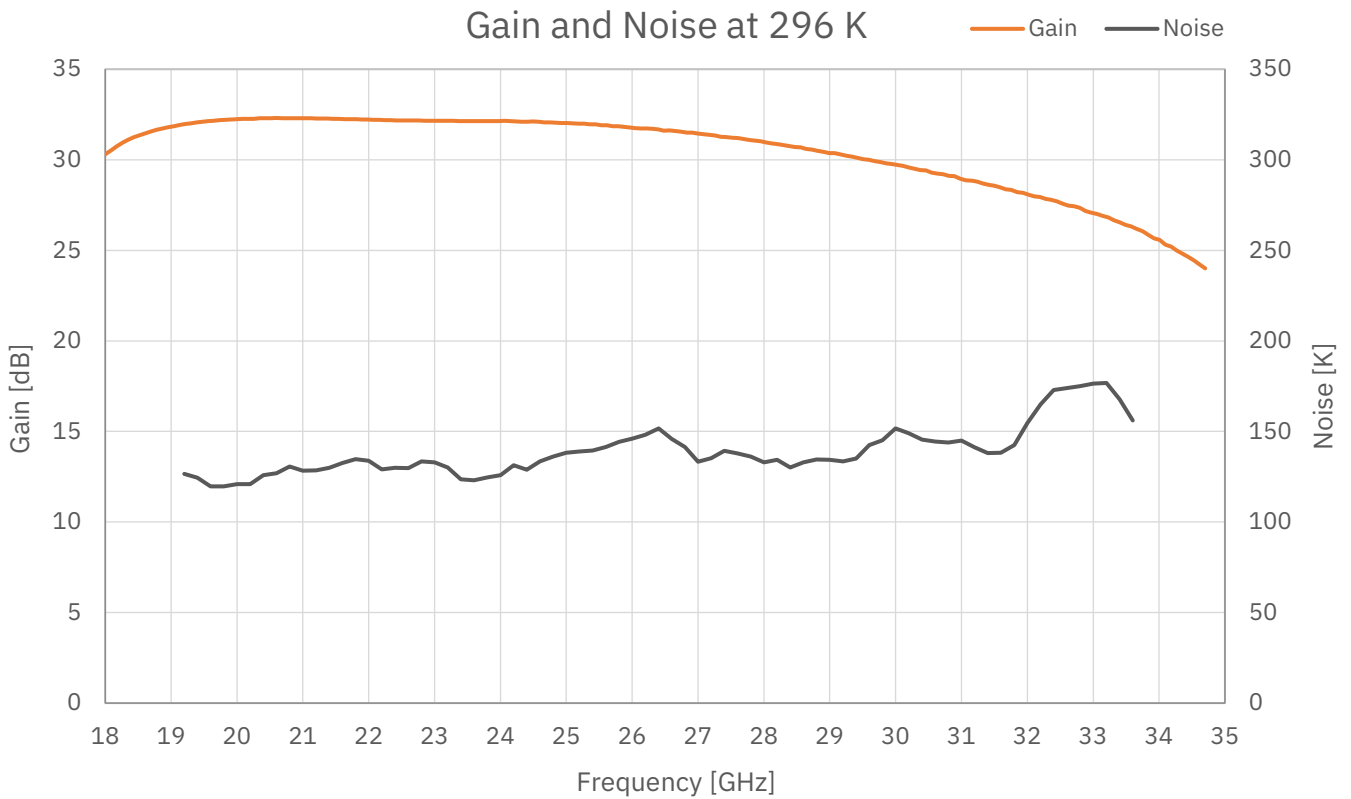


Measured data,  $T_{amb} = 5\text{ K}$




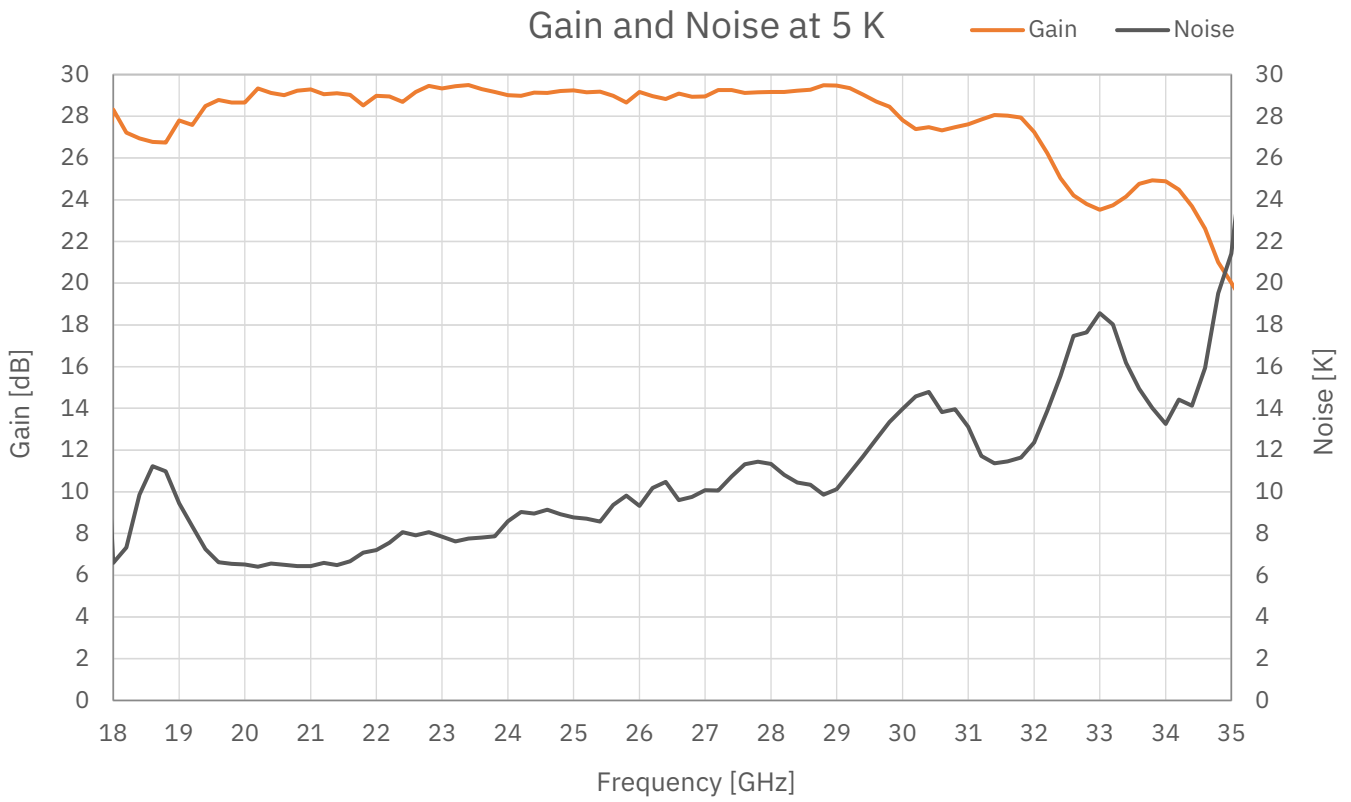


## Dimensions and wiring


Units: mm

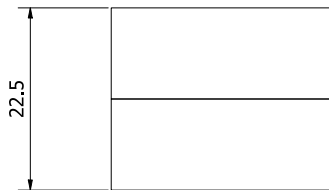

Flange UG1530/U

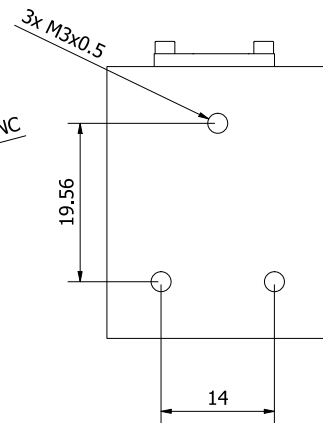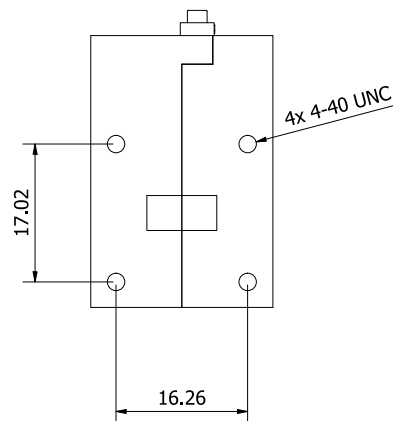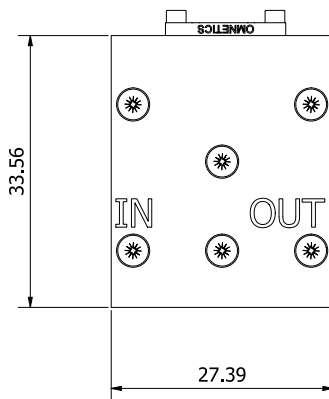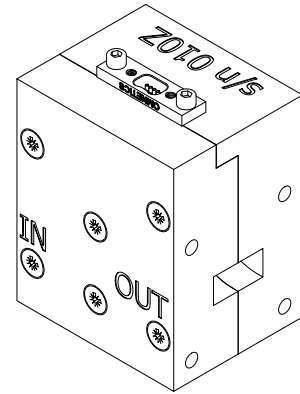

Nano-D panel connector seen from outside the LNA

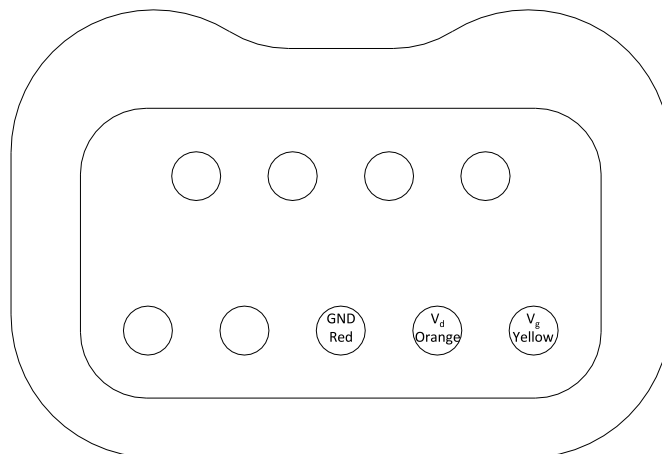

---

## Biasing procedure

For safe operation of the LNA, please carefully follow the instructions below. Always honor the maximum ratings stated in the datasheet.

### A. With constant current supply, e.g. LNF-PS\_3, LNF-PS3b and LNF-PS\_EU2

Power up:

1. Switch on the power supply
2. Double check that  $V_d$  is set to the nominal voltage in the datasheet
3. Connect the LNA's RF input and output to your grounded test set-up
4. Connect the power supply to the LNA
5. Check that the measured  $I_{ds}$  is equal to the nominal value in this datasheet. Tune to the correct value if necessary.
6. Before starting a cool down, make sure that the power supply is set to the stated values at 5K. Do not cool down with the power supply set to the room temperature values.

Power down:

1. Disconnect the power supply from the LNA
2. Switch off the power supply

### B. With constant voltage supply, e.g. LNF-PS\_1

Power up:

1. Switch on the power supply
2. Set  $V_d$  and  $V_g$  to the nominal voltages stated in this datasheet
3. Connect the LNA's RF input and output to your grounded test set-up
4. Connect the power supply to the LNA
5. Fine tune  $V_g$  to get the nominal  $I_{ds}$  stated in this datasheet. The actual  $V_g$  can deviate a bit from the value in the datasheet depending on ground wire resistance in your set-up.
6. Before starting a cool down, make sure that the power supply is set to the stated values at 5K. Do not cool down with the power supply set to the room temperature values.

Power down:

1. Disconnect the power supply from the LNA
2. Switch off the power supply